Hisense

Operation Installation & Maintenance Manual

INVERTER-DRIVEN MULTI-SPLIT AIR-CONDITIONER (HEAT PUMP)


- INDOOR UNIT -

Туре	N	lodel
Ceiling Type Floor Type	AVV-17URSCA AVV-18URSCA AVV-22URSCA AVV-24URSCA AVV-27URSCB AVV-30URSCB AVV-38URSCB AVV-48URSCC	AVV-17UR2SA AVV-18UR2SA AVV-22UR2SA AVV-24UR2SA AVV-27UR2SB AVV-30UR2SB AVV-38UR2SB AVV-48UR2SC


IMPORTANT:

READ AND UNDERSTAND THIS MANUAL BEFORE USING THIS HEAT-PUMP AIR CONDITIONERS. KEEP THIS MANUAL FOR FUTURE REFERENCE.



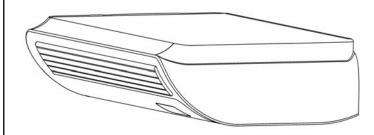

Floor Type

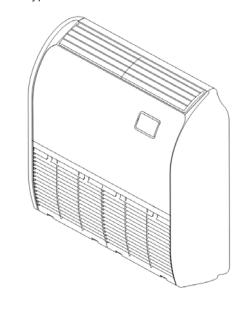

P00642Q

ORIGINAL INSTRUCTIONS



Declaration of Conformity (Manufacturer's Declaration)



Qingdao Hisense Hitachi Air-conditioning Systems Co., Ltd. Add: 218, Qianwangang Road, Economic & Technical Development Zone, Qingdao, P.R. China declares under its sole responsibility that the air conditioning models to

which this declaration relates:

AVV-17URSCA, AVV-18URSCA, AVV-22URSCA, AVV-24URSCA, AVV-27URSCB, AVV-30URSCB, AVV-38URSCB, AVV-48URSCC,

are in conformity with the following standard(s) or other normative document(s), provided that these are used in accordance with our instructions:

> EN 60335-1 EN 60335-2-40 EN 62233 EN 55014-1 EN 61000-3-2 EN 61000-3-3 EN 55014-2

following the provisions of:

2006/42/EC 2014/30/EU 2012/19/EU 2011/65/EU

Directives, as amended.

Manufacturing number and manufacturing year: refer to model Nameplate. Notes:

> This declaration becomes invalid, if technical or operational modifications are introduced without the manufacturers consent.

Hisense Italia S.r.I. is authorised to Compile the Technical Construction File. Ad.: Via Montefeltro 6A, 20156 Milano.

Hisense

Name, Surname

Position/ Title Director

Date : April 15,2016

IMPORTANT NOTICE

- Hisense pursues a policy of continuing improvement in design and performance of products. The right is therefore reserved to vary specifications without notice.
- Hisense cannot anticipate every possible circumstance that might involve a potential hazard.
- This heat pump air conditioner is designed for standard air conditioning only. Do not use this heat pump air conditioner for other purposes such as drying clothes, refrigerating foods or for any other cooling or heating process.
- The installer and system specialist shall secure safety against leakage according to local regulations or standards. The following standards may be applicable if local regulations are not available. British Standard, BS4434 or Japan Standard, KHKS0010.
- No part of this manual may be reproduced without written permission.

Signal words (DANGER, WARNING and CAUTION) are used to identify levels of hazard seriousness.
 Definitions for identifying hazard levels are provided below with their respective signal words.

A DANGER

Immediate hazards which WILL result in severe personal injury or death.

AWARNING

Hazards or unsafe practices which COULD result in severe personal injury or death.

ACAUTION

Hazards or unsafe practices which COULD result in minor personal injury or product or property damage.

NOTE: Useful information for operation and/or maintenance.

- It is assumed that this heat pump air conditioner will be operated and serviced by English speaking people. If this is not the case, the customer should add safety, caution and operating signs in the native language.
- If you have any questions, contact your distributor or dealer of Hisense.
- Perform installation work according to local codes and regulations.
- This manual gives a common description and information for this heat pump air conditioner which you
 operate as well as for other models.
- This heat pump air conditioner has been designed for the following temperatures. Operate the heat pump air conditioner within this range.

Temperature (°C)

		Maximum	Minimum
Cooling	Indoor	32 DB/23 WB	21 DB/15 WB
Operation	Outdoor	43 DB	-5 DB
Heating	Indoor	27 DB	15 DB
Operation	Outdoor	15 WB	- 20 WB

DB: Dry Bulb, WB: Wet Bulb

This manual should be considered as a permanent part of the air conditioning equipment and should remain with the air conditioning equipment.

IMPORTANT NOTICE



Correct Disposal of this product

This marking indicates that this product should not be disposed with other household wastes. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

CHECKING PRODUCT RECEIVED

- Upon receiving this product, inspect it for any shipping damage.
 Claims for damage, either apparent or concealed, should be filed immediately with the shipping company.
- Check the model number, electrical characteristics (power supply, voltage and frequency) and accessories to determine if they are correct.

The standard utilization of the unit shall be explained in these instructions.

Therefore, the utilization of the unit other than those indicated in these instructions is not recommended. Please contact your local agent, as the occasion arises.

Hisense's liability shall not cover defects arising from the alteration performed by a customer without. Hisense's consent in a written form.

TABLE OF CONTENTS

Sec	tion1	Operation Manual	
1.	Safety	Summary	1
2.	Syster	m Description	1
3.	Remo	te Control Switch	2
4.	Before	Operation	3
5.	Opera	tion Method	3
6.	Settin	g of Automatic Swing Louver	4
7.	Filter (Cleaning	4
	7.1	Taking Out the Filter	
	7.2 7.3	Clean the Filter Reset of Filter Indication	_
8.		eshooting	
	8.1	If Trouble Still Remains	
	8.2	No Operation	5
	8.3	Not Cooling or Heating Well	_
	8.4	This is Not Abnormal	5
Sect	ion2	Installation & Maintenance Manual	
1.	Safety	Summary	6
2.	Struct	ure ·····	6
	2.1	Indoor Unit & Refrigerant Cycle	6
	2.2	Necessary Tools and Instrument List for Installation	6
3.		portation and Handling ······	
		Transportation ······	
		Handling of Indoor Unit ······	_
4			
4.		r Unit Installation	
		Factory-Supplied Accessories	
	4.2 4.3	Installation	-
E			
5.		gerant Piping Work	
	5.1	Piping Materials ······	12

7.	Electri	cal Wiring ·····	16
	7.1	General Check ·····	16
	7.2	Electrical Wiring Connection ·····	16
8.	Test	Run	17
9.	Safety	and Control Device Setting ······	18
10.	Comm	non	18
	10.1	Field Minimum Wire Size for Power Source Line · · · · · · · · · · · · · · · · · · ·	18
	10.2	Setting of DIP Switch	19

Section 1 Operation Manual

1. Safety Summary

ADANGER

- Do not pour water into the indoor or outdoor unit. These products are equipped with electrical parts. If poured, it will cause a serious electrical shock.
- Do not touch or adjust safety devices inside the indoor or outdoor units. If these devices are touched or readjusted, it may cause a serious accident.
- Do not open the service cover or access the indoor or outdoor units without turning OFF the main power supply.

AWARNING

- Refrigerant leakage can cause difficulty with breathing due to insufficient air.
 If leakage occurs, turn OFF the main switch, put out fire at once and contact your service contractor.
- Do not use any sprays such as insecticide, lacquer, hair spray or other flammable gases within approximately one (1) meter from the system.
- If earth leakage breaker (ELB) or fuse is often activated, stop the system and contact your service contractor.

ACAUTION

- The appliance is not to be used by children or person with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised that they do not play with the appliance.
- The appliance should not be installed in the laundry.

NOTE

 It is recommended that the room be ventilated every 3 to 4 hours.

2. System Description

A maximum total capacity of 130% and a minimum total capacity of 50% can be chosen by combination of the indoor units (Table 2.1).

The heat pump air conditioner is designed to offer cooling, heating, dry and fan operations. These operation modes are controlled by the remote control switch.

Table 2.1 Indoor Unit Type List

Indoor Unit Type	Nominal Capacity(×10³Btu/h)									
	17	18	22	24	27	30	38	48		
Ceiling Type/ Floor Type	0	0	0	0	0	0	0	0		

O: Available

3. Remote Control Switch

ACAUTION

Press switches only with fingers. Do not press switches by any other item, as it may break switches.

Do not touch the CHECK switch. This switch is only for servicing. If touched, press the CHECK switch again to reset.

Temperature Setting

When the TEMP switch is pressed, temperature increases by 1 degree. The minimum setting indication is 17°C and the maximum setting indication is 30°C.

Set and Actual Temperature

The set temperature is for the air temperature at the sensor (thermistor) of the indoor unit. The actual room temperature may be different

from the air temperature of the sensor due to the difference of the sensing location.

Touching Type Switches

This control switch is of touching type. Slightly press the switch by finger. The operation can be checked by the display of the liquid crystal.

Multiple-Unit Control

16 indoor units, as a maximum number, can be controlled by one remote control switch.

Refer to the Installation Manual for Remote Control Switch.

4. Before Operation

ACAUTION

Supply electrical power to the system for approximately 12 hours before start-up after long shutdown. Do not start the system immediately after power supply, it may cause a compressor failure, because the compressor is not heated well.

Make sure that the outdoor unit is not covered with snow or ice. If covered, remove it by using hot water (approximately 50°C). If the water temperature is higher than 50°C, it will cause damage to plastic parts.

When the system is started after a shutdown longer than approximately 3 months, it is recommended that the system be checked by your service contractor.

Turn OFF the main switch when the system is stopped for a long period of time. If the main switch is not turned OFF, electricity is consumed, because the oil heater is always energized during compressor stopping.

5. Operation Method

Regarding the instructions of Wired Remote Control Switch or Wireless Remote Control Switch, read the operation manual attached to the control switch.

6. Setting of Automatic Swing Louver

6.1 Common

When the SWING LOUVER switch is pressed, the swing louver starts its operation.

When " is moving, it indicates the operation of the louver continuously. When the swinging operation of the louver is not required, press the SWING LOUVER switch again. The louver is stopped at an angle indicated by the direction of this mark " ".

NOTE

- 1. There exists a time lag between the actual outlet air angle and the liquid crystal indication.
- When the SWING LOUVER switch is pressed, the louver will not stop immediately. The louver will move one extra swing at the next.
- During the cases in item (A), the louvers are fixed automatically.
 However, indication of the louvers is changed at setting before.
 - (A) Outlet air angle is fixed at horizontal position during start-up of heating operation and defrosting operation and when thermostat is ON. When the outlet air temperature reaches
 - higher than approximately 30°C, swinging of louvers is started.
- 4. During the defrosting operation, fan stops running.

ACAUTION

Do not turn the air louver by hand. If moved, the louver mechanism will be damaged.

7. Filter Cleaning

ACAUTION

Do not operate the system without the air filter to protect the indoor unit heat exchanger against being clogged.

Turn OFF the main power switch before taking out the filter. (The previous operation mode may appear.)

7.1 Taking Out the Filter

The indication, "FILTER" is shown on the display of the remote control switch after approximately 1,200 hour operation.

Take out the air filter according to the following steps.

Step 1

Open the air inlet grille after removing screw covers and fixing screws.

Step 2

Take out the air filter from the air inlet grille by supporting the air grille and lifting the air filter after detaching the filter from clips.

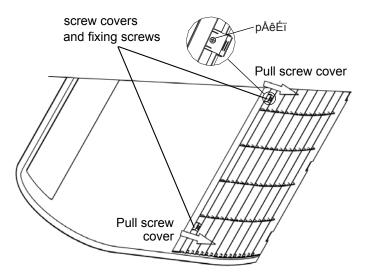


Fig.7.1 Open the air inlet grille

7.2 Clean the Filter

Clean the air filter according to the following steps.

Step 1

Use a vacuum cleaner or let water flow onto the air filter for removing the dirt from the air filter.

ACAUTION

Do not use hot water higher than approximately 40°C.

Step 2

Dry the air filter in the shade after shaking off moisture.

7.3 Reset of Filter Indication

After cleaning the air filter, press the "RESET" button. The FILTER indication will disappear and the next filter cleaning time will be set.

8. Troubleshooting

ACAUTION

When overflow of drain water from the indoor unit occurs, stop the operation and contact your contractor.

When you smell or see white smoke coming from the unit, turn OFF the main power supply and contact your contractor.

8.1 If Trouble Still Remains ...

If the trouble still remains even after checking the following, contact your contractor and inform them of the following items.

- (1) Unit Model Name
- (2) Content of Trouble
- (3) Alarm Code No. on Liquid Crystal Display

8.2 No Operation

Check whether the SET TEMP is set at the correct temperature.

8.3 Not Cooling or Heating Well

- Check for obstruction of air flow of the outside or inside units.
- Check if too much heat source exists in the room
- Check if the air filter is clogged with dust.
- Check to see if the doors or windows are opened or not.
- Check if the temperature condition is not within the operation range.

8.4 This is Not Abnormal

Smells from Indoor Unit

Smell adheres on indoor unit after a long period of time. Clean the air filter and panels or allow a good ventilation.

Sound from Deforming Parts

During system starting or stopping, an abrading sound might be heard. However, this is due to thermal deformation of plastic parts. It is not abnormal.

Steam from Outdoor Heat Exchanger

During defrosting operation, ice on the outdoor heat exchanger is melted, resulting in making steam.

Dew on Air Panel

When the cooling operation continues for a long period of time under high humidity conditions (higher than 27°C/80% R.H.), dew can form on the air panel.

Refrigerant Flow Sound

While the system is being started or stopped, sound from the refrigerant flow may be heard.

NOTE

Except for a long period of shutdown, keep the main switch ON, since the oil heater is energized when the compressor is stopping.

Section 2 Installation & Maintenance Manual

1. Safety Summary

AWARNING

- Do not perform installation work, refrigerant piping work, drain piping and electrical wiring connection without referring to the installation manual.
- Check that the ground wire is securely connected.
- Connect a fuse of specified capacity.
- Pay a special attention to the place, such as a basement, etc. where refrigerant can stay, since refrigerant is heavier than air.

ACAUTION

Do not install the indoor unit, outdoor unit, remote control switch and cable within approximately 3 meters from strong electromagnetic wave radiators such as medical equipment.

2. Structure

2.1 Indoor Unit & Refrigerant Cycle

Regarding the structural drawings and the refrigerant cycle diagrams, refer to Technical Catalogue II.

2.2 Necessary Tools and Instrument List for Installation

No.	Tool	No.	Tool
1	Handsaw	12	Charging Cylinder
2	Screwdriver	13	Gauge Manifold
3	Vacuum Pump	14	Cutter for Wires
4	Refrigerant Gas Hose	15	Gas Leak Detector
5	Megohmmeter	16	Leveller
6	Copper Pipe Bender	17	Clamper for Solderless Terminals
7	Manual Water Pump	18	Hoist (for Indoor Unit)
8	Pipe Cutter	19	Ammeter
9	Brazing Kit	20	Voltage Meter
10	Hexagon Wrench	21	Wrench
11	Spanner		

NOTE

About vacuum pump, gas hose, charging cylinder, gauge manifold, please use suitable equipments for R410A respectively. Do not mix other refrigerant.

3. Transportation and Handling

3.1 Transportation

Transport the product as close to the installation location as practical before unpacking.

ACAUTION

Do not put any material on the product.

3.2 Handling of Indoor Unit


AWARNING

Do not put any foreign material into the indoor unit and check to ensure that none exists in the indoor unit before the installation and test run. Otherwise, a fire or failure, etc. may occur.

ACAUTION

Do not hold the resin covers when holding or lifting the indoor unit.

 To avoid damage to the resin covers, before lifting or moving the indoor unit, put a cloth on the resin covers.

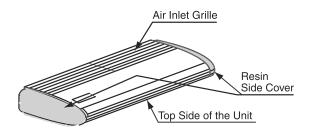

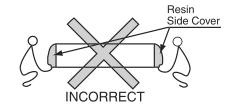


Fig. 3.1 Side Covers


 Remove the air inlet grille and resin side cover befor installation.

Remove the air inlet grille


- (1) Open the air inlet grille after removing screw covers and fixing screws as is shown in Fig 7.1 of section 1.
- (2) Remove fixing screws of air inlet grille.
- (3) Carefully push the air inlet grille away from the mounting plate of indoor unit.
- (4) Remove the air inlet grille.

Remove the resin side cover

- (1) Remove fixing screw of side cover.
- (2) Carefully push the side cover away from the indoor unit approximately 10mm forward.
- (3) Remove the resin side cover .

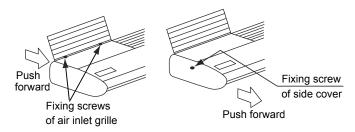


Removing the air inlet grille and resin side cover

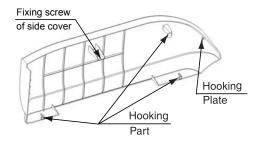

Inside of resin side cover
The three hooking parts and one hooking plate
should be mounted when recovering resin side cover

Fig. 3.2 Removing the air inlet grille and resin side cover

 Remove the fixing adhesive tape on the fan snail shell and outer panel befor installation. The tape is just used for fixing during transportation.

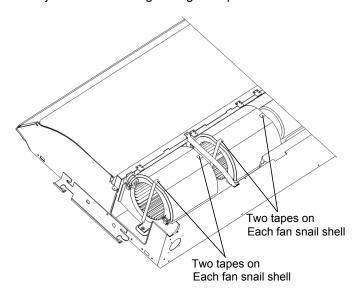

 The mechanism of the automatic swing louver is utilized. Do not move the swing louver by hand or other objects. This can damage the mechanism of the automatic swing louver.

4. Indoor Unit Installation

A DANGER

Do not install the indoor unit in a flammable environment to avoid fire or an explosion.

AWARNING

- Check to ensure that the ceiling slab is strong enough. If not strong enough, the indoor unit may fall down on you.
- Do not install the indoor unit outdoors. If installed outdoors, an electric hazard or electric leakage will occur.

It is recommended that indoor units be installated 2.3 to 3 meters from the floor level when ceiling installation.

4.1 Factory-Supplied Accessories

Check to ensure that the following accessories are packed with the indoor unit.

NOTE


If any of these accessories are not packed with the unit, please contact your contractor.


Table 4.1 Factory-Supplied Accessories

Accesso	ry	Q'ty	Purpose
Pattern Board (Carton Board)		1	For Adjusting Space and Position of the Unit
Washer with Insulation Material (M10)		4	
Washer (M10)		4	For Unit Installation
Drain Hose		1	
Hose Clamp	60	2	For Drain Hose Connection
Clamp of Drain Pipe Conr	nection 😸	1	, , , , , , , , , , , , , , , , , , , ,
Drain Pipe Connection		1	
Packing (10T×38×165)		1	For Covering Clamp of Drain Pipe Connection
Insulation (22ID)	0	1	For Refrigerant Piping
Insulation (28ID)	0	1	Connection
Cord Clamp		6	For Fixing Remote Control
Cord Clamp		2	Switch Wiring and Insulation of Piping
Packing (5Tx50x200)		1	For Covering Wiring Connection
Packing (5Tx270x270)		1	For Covering Drain Connection
Wireless Remote Control Switch		1	For Controlling the Unit


4.2 Initial Check

 Install the indoor unit with a proper clearance around it for operation and maintenance working space, as shown in Fig. 4.1.

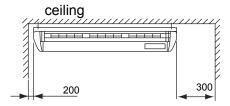

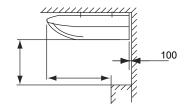

For ceiling installation

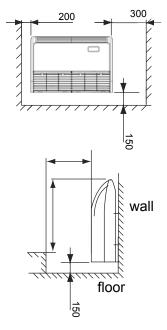

For wall mounted installation

Fig. 4.1 Operation and Maintenance Space

- Check to ensure that the ceiling or wall has a sufficient strength to hang the indoor unit.
- Consider the air distribution from the indoor unit to the space of the room, and select a suitable location so that uniform air temperature in the room can be obtained.
- Do not install flammable parts in the service space for the indoor unit.

- Pay attention to the following points when the indoor unit is installed in a hospital or other facilities where there are electronic waves from medical equipment, etc.
 - (A) Do not install the indoor unit where the electromagnetic wave is directly radiated to the electrical box, remote control cable or remote control switch.
 - (B) Install the indoor unit and components as far as practical or at least 3 meters from the electromagnetic wave radiator.
 - (C) Prepare a steel box and install the remote control switch in it. Prepare a steel conduit tube and wire the remote control cable in it. Then, connect the ground wire with the box and the tube.
 - (D) Install a noise filter when the power supply emits harmful noises.
- To avoid any corrosive action to the heat exchangers, do not install the indoor unit in an acid or alkaline environment.

AWARNING

Check to ensure that the number of below is within 0.3kg/cm³. Otherwise it may cause danger situation if the refrigerant in the Outdoor Unit leaks into the room where this Indoor Unit is installed.

(Total Refrigerant Quantity per one Outdoor Unit)

(Volume of the room where this Indoor Unit is installed.

In detail, refer to the Installation Manual for outdoor unit.

4.3 Installation

4.3.1 Mounting of Suspension Bolts

Step 1

Select final location and installation direction of the indoor unit paying careful attention to the space for the piping, wiring and maintenance.

Step 2

Mount suspension bolts, as shown in Fig. 4.2. *For Concrete Slab *For Steel Beam


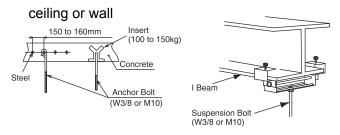


Fig. 4.2 Mounting of Suspension Bolts

4.3.2 Installation Pattern

- Pattern Board for installation is in the packing carton of indoor unit.
 Use it to decide an installation location and direction of the unit.
- (2) Press the Pattern Board tightly onto the surface, draw out the hole position for suspension bolts with a pencil.

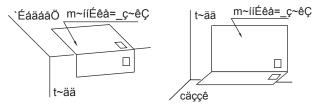


For ceiling installation


For wall mounted installation

Fig.4.3 Pattern Board

4.3.4 Mounting the Indoor Unit

(1) Mount the nuts and washers to the suspension bolts.

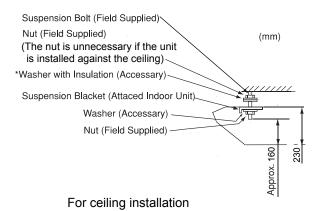

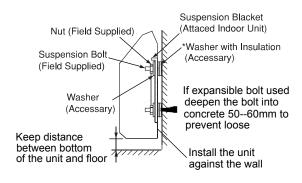

For wall mounted installation

Fig. 4.5 Mounting Nuts and Washers

- (2) Lift the Indoor Unit by hoist, and do not put any force on the resin covers.
- (3) Secure the indoor unit using the nuts, washers.

4.3.3	Mounting	Position	of the	Indoor	Unit
-------	----------	----------	--------	--------	------

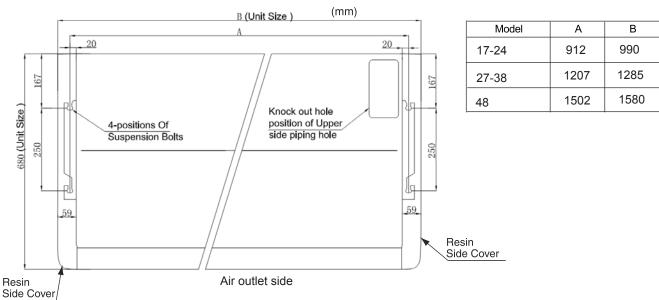


Fig. 4.4 Mounting Position


(4) Adjusting of the Unit Level

(1) Check to ensure that the foundation is flat, taking into account the maximum foundation gradient.

For ceiling installation

The unit should be installed so that the rear side of the unit is slightly (Min. 10mm) lower than the front side, in order to avoid the incorrect position of the drain discharge.

The unit should be installed so that the drain piping connection side of the unit is slightly (Min. 10mm) lower than the other side ,in order to avoid the incorrect position of the drain dicharge.

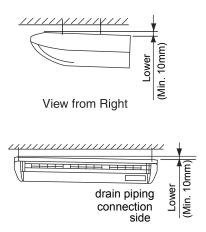


View from Front

Fig. 4.6 Inclination of Unit for Drain for ceiling installation


For wall mounted installation

The unit should be installed so that the bottom of rear side inclines towards the wall slightly. (Min. 10mm)

The unit should be installed horizontal viewed from front.

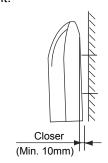

View from Right

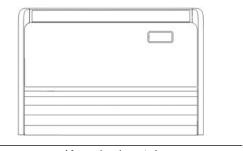

Keep horizontal

View from front

Fig. 4.7 Inclination of Unit for Drain for wall mounted installation

(2) Tighten the bolts of the sling nuts with the suspension brackets after adjustment is completed.

5. Refrigerant Piping Work

A DANGER

Use refrigerant R410A in the refrigerant cycle. Do not charge oxygen, acetylene or other flammable and poisonous gases into the refrigerant cycle when performing a leakage test or an air-tight test. These types of gases are extremely dangerous and can cause an explosion. It is recommended that compressed air, nitrogen or refrigerant be used for these types of tests.

5.1 Piping Materials

- (1) Prepare locally-supplied copper pipes.
- (2) Select the piping size from the following table.

Table 5.1 Piping Size


mm (in.)

Model	Gas Piping	Liquid Piping
17-18	φ15.88 (5/8)	φ6.35 (1/4)
22-30	ф15.88 (5/8)	φ9.53 (3/8)
38-48	φ15.88 (5/8)	ф9.53 (3/8)

(3) Select clean copper pipes. Make sure there is no dust and moisture inside. Blow the inside of the pipes with nitrogen or dry air, to remove any dust or foreign materials before connecting pipes.

5.2 Piping Connection

(1) Position of piping connection is shown in Fig. 5.1.

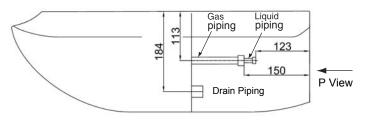



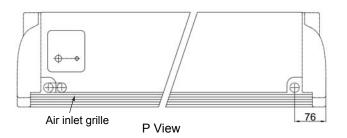


Fig. 5.1 Piping Connection of Indoor Unit


(A) Piping from Backward Side

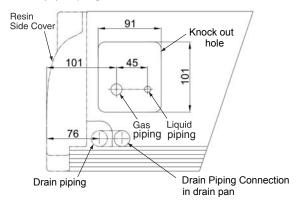

(B) Piping from Upper Side

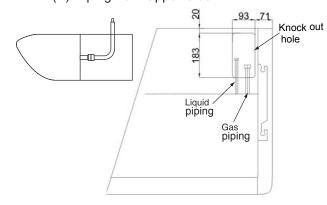

(C) Piping from Right Side Cover

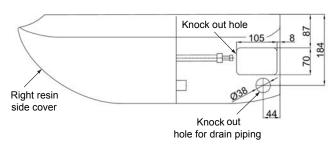

(2) Piping work should be performed from the bottom side of the unit. Open the air inlet grille as is shown in Fig.7.1 of section 1 and remove the resin side cover as is shown in Fig.3.2 before the piping work.

NOTE

Cut out the knock-out hole along the groove in the Right Side Cover using saw blade to avoid sharp edges if piping from right side.

Seal the clearance around pipes with seal material to prevent ingress of dirt and protect wires from damage by sharp edge after piping and wiring.

(3) When tightening the flare nut, use two spanners as shown in Fig. 5.2.




Pipe Size	Tightening Torque (N.m)
φ6.35mm	20
φ9.53mm	40
φ15.88mm	80
φ19.05mm	100

Fig. 5.2 Tightening Work of Flare Nut

X Flaring Dimension

Perform the flaring work as shown below.

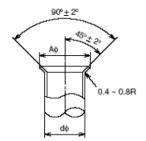

Diameter	A +0 -0.4		
Φ d	R410A	R407C	
6.35	9.1	9.0	
9.53	13.2	13.0	
12.7	16.6	16.2	
15.88	19.7	19.4	
19.05	(*)	23.3	

- (*)It is impossible to perform the flaring work with 1/2H material. In this case, use an accessory pipe(with a flare).
- (4) After connecting the refrigerant piping, seal the refrigerant pipes by using the factory-supplied insulation material as shown in Fig 5.3.



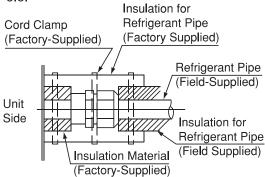


Fig. 5.3 Insulation on Pipes

ACAUTION

- Cap the end of the pipe when the pipe is to be inserted through a hole.
- Do not put pipes on the ground directly without a cap or vinyl tape at the end of the pipe.

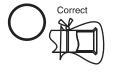

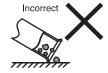

(5) Evacuation and refrigerant charging procedures should be performed according to "Installation & Maintenance Manual" of the outdoor unit.

6. Drain Piping

ACAUTION

- Do not create an upper-slope or rise for the drain piping, since drain water can flow back to the indoor unit and leakage into the room will occur when the system operation is stopped.
- Do not connect the drain pipe with sanitary or sewage piping or any other drainage piping.
- When the common drain piping is connected with other indoor units, the connected position of each indoor unit must be higher than the common piping. The pipe size of the common drain pipe must be large enough according to the unit size and number of units.
- After performing drain piping work and electrical wiring, check to ensure that water flows smoothly

The standard direction of drain piping connection is right side as viewed from the discharge grilles. However, it can be performed from the left side when the left side connection is required due to the building construction.

- (1) For Right Side Connection
 - (A) Insert the Drain Pipe Connection into Drain Boss with clamp until the connection reaches the end of the drain pan.
 - (B) Insert the Drain Hose and Drain Pipe with clamps sequently until reaching the end.
 - (C) Tighten the screw for the hose clamp in order to hold the hose around the drain connection without any leakage of drain water as shown in Fig. 6.1.
 - (D) Insulate the drain hose around the hose clamp to prevent any condensation as shown in Fig. 6.1.

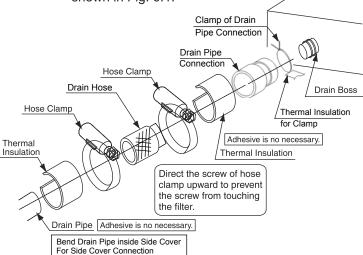


Fig. 6.1 Connecting Drain Piping

(2) For Left Side Connection

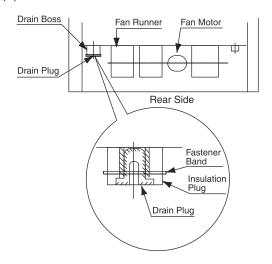


Fig. 6.2 Drain Plug

Remove the drain plug of the left-side drain boss as indicated in the following procedure.

- (A) Cut the fastener.
- (B) Remove the insulation material.
- (C) Remove the drain plug.
- (D) Insert the drain plug into the right-side drain boss by using a driver as shown in Fig. 6.3.

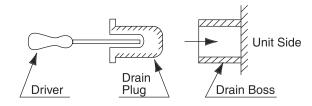


Fig. 6.3 Inserting Drain Plug

(E) After inserting the drain plug into the right-side drain boss, seal the jointed part by using a water-proof chloride type sealing material and secure it with fastener.

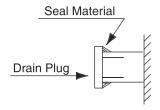


Fig. 6.4 Sealing Joint Part

- (F) Wrap the insulation material around the drain connection.
- (G) Connect the drain hose to the left-side drain connection as the same as the right side drain connection procedure.

- (3) Connecting a Drain Piping
 - (A) Prepare a polyvinyl chloride (P. V. C) tube with an outer diameter of 32mm. (VP25)
 - (B) Pay attention to the position of the drain pipe. Keep the down-slope, 1/25 to 1/ 100. Do not create an upper slope or rise for the drain piping.
 - (C) Seal the connecting part of the drain pipe by using the water-proof chloride type sealing material.
 - (D) Wrap the insulation material around the connecting part perfectly.
 - (E) Fasten the drain pipe to the connecting part with the factory-supplied clamp.

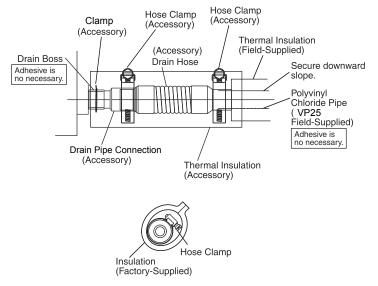


Fig. 6.5 Wrapping Insulation Material

- (F) Do not connect the drain pipes with sanitary or sewage or any other drainage pipe.
- (G) When installing the pipe, do not tie the drain pipe and refrigerant pipe together.
- (H) After completing the drain pipe work, pour water into the drain pan and check to ensure that water can flow smoothly.

Common

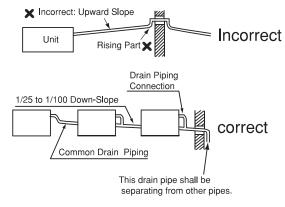


Fig.6.6 Drain Piping

7. Electrical Wiring

AWARNING

- Turn OFF the main power switch to the indoor unit and the outdoor unit before electrical wiring work or a periodical check is performed.
- Check to ensure that the indoor fan and the outdoor fan have stopped before electrical wiring work or a periodical check is performed.
- Protect the wires, drain pipe, electrical parts, etc. from rats or other small animals.
 If not protected, rats may gnaw at unprotected parts and at the worst, a fire will occur.
- Tighten screws according to the following torque.

M3.5: 1.2 N-m M5: 2.0~2.4 N-m

ACAUTION

- Wrap the accessory packing around the wires, and plug the wiring connection hole with the seal material to protect the product from any condensate water or insects.
- Tightly secure the wires with the cord clamp inside the indoor unit.
- Secure the cable of the remote control switch using the cord clamp inside the electrical box.

7.1 General Check

- (1) Make sure that the field-selected electrical components (main power switches, circuit breakers, wires, conduit connectors and wire terminals) have been properly selected according to the electrical data given in "Technical Catalog I". Make sure that the components comply with National Electrical Code (NEC).
- (2) Check to ensure that the power supply voltage is within +10% of the rated voltage.
- (3) Check the capacity of the electrical wires. If the power source capacity is too low, the system cannot be started due to the voltage drop.
- (4) Check to ensure that the ground wire is connected.
- (5) Power Source Main Switch Install a multi-pole main switch with a space of 3.5mm or more between each phase.

7.2 Electrical Wiring Connection

The electrical wiring connection for the indoor unit is shown in Fig.7.3.

- (1) Connect the cable of an optional remote control switch or an optional extension cable to the terminals inside the electrical box through the connecting hole.
- (2) Connect the power supply and earth wires to the terminals in the electrical box.
- (3) Connect the wires between the indoor unit and the outdoor unit to the terminals in the electrical box.
- (4) Tightly clamp the wires using the cord clamp .

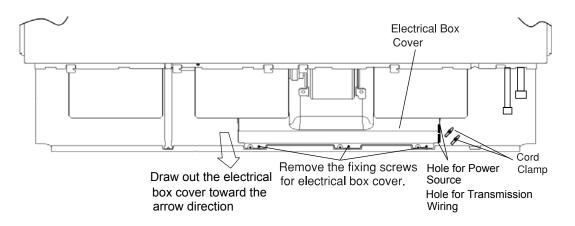


Fig.7.1 Remove electrical box cover

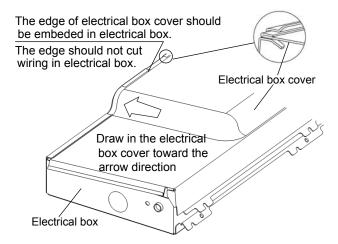
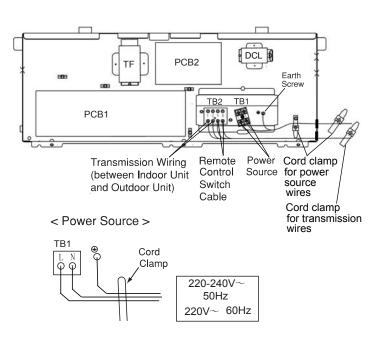


Fig.7.2 Recover electrical box cover



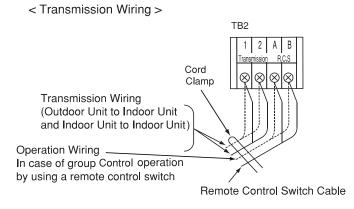


Fig.7.3 Electrical Wiring Connection for Indoor Unit

ACAUTION

Before electrical wiring work, turn OFF the power source. If the connectors are connected without turning OFF the power source, the auto-swing louver can not activate.

NOTE

Wired Remote Control Switch and Wireless Remote Control Switch can not be used simultaneously .If Wired Remote Control Switch is connected ,Disconnect Wireless Receiver Wiring on the right side as viewed from the discharge grilles (refrigerant piping connection side).

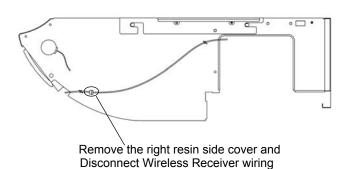


Fig.7.4 Disconnect Wireless Receiver wiring

8. Test Run

Test run should be performed according to "Installation & Maintenance Manual" of the outdoor unit.

(10-Pole Connector)

- Do not operate the system until all the check points have been cleared.
 - (A) Check to ensure that the electrical resistance is more than 1 megohm, by measuring the resistance between ground and the terminal of the electrical parts. If not, do not operate the system until the electrical leakage is found and repaired.
 - (B) Check to ensure that the stop valves of the outdoor unit are fully opened, and then start the system.
 - (C) Check to ensure that the switch on the main power source has been ON for more than 12 hours, to warm the compressor oil by the crankcase heater.
- Pay attention to the following items while the system is running.
 - (A) Do not touch any of the parts by hand at the discharge gas side, since the compressor chamber and the pipes at the discharge side are heated higher than 90°C.
 - (B) DO NOT PUSH THE BUTTON OF THE MAGNETIC SWITCH(ES). It will cause a serious accident.

9. Safety and Control Device Setting

Indoor Unit

Model		18~48	
For Control Circuit Fuse Capacity	А	5	
Freeze Protection Thermostat Cut-Out Cut-In	့ ့	0 14	
Thermostat Differential	°C	2	

10. Common

10.1 Field Minimum Wire Sizes for Power Source

AWARNING

- Use an ELB (Electric Leakage Breaker). If not used ,it will cause an electric shock or a fire.
- Run through the cables using conduit tube, and Completely seal the end of conduit tube with sealing materials.

Field Minimum Wire Sizes for Power Source

	Power	Maximum	Power Source Cable Size	Transmtting Cable Size		
Model	Source	Current	EN60335-1 *1	EN60335-1 *1		
17-18		0.75A				
22-24	220-240V	1.00A				
27	\sim 50Hz	1.00A	2.5mm ²	0.75mm²		
30	220V ∼ 60Hz	1.10A	2.5/////			
38		1.98A				
48		2.25A				


NOTES:

- 1) Follow local codes and regulations when selecting field wires.
- 2) The wire sizes marked with *1 in the above table are selected at the maximum current of the unit according to the European Standard, EN60335-1.Use the wires which are not lighter than the ordinary polyvinyl chloride sheathed flexible cord (code designation H05VV-F).
- 3) Use a shielded cable for the transmitting circuit and connect it to ground.
- In the case that power cables are connected in series, add each unit maximum current and select wires below.

According to EN 60335-1			
Current (A)	Wire Size (mm²)		
i≤6	2.5		
6 <i≤10< td=""><td>2.5</td></i≤10<>	2.5		
10 <i≤16< td=""><td>2.5</td></i≤16<>	2.5		
16 <i≤25< td=""><td>4</td></i≤25<>	4		
25 <i≤32< td=""><td>6</td></i≤32<>	6		
32 <i≤40< td=""><td>10</td></i≤40<>	10		
40 <i≤63< td=""><td>16</td></i≤63<>	16		
63 <i< td=""><td>%1</td></i<>	%1		

^{**1} In the case that current exceeds 63A, do not connect cables in series.


- 10.2 Setting of Dip Switches
 - (A) Position of Dip Switches

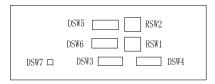

- (B) The PCB in the indoor unit is equipped with 2 rotary switches and 5 dip switches. Before testing unit, set these dip switches according to the following instructions. Unless these dip switches are set in the field, the unit can not be operated.
- (1) Unit No. Setting(RSW1&DSW6)

Setting is required. Set the unit No. of all indoor units respectively and serially by following setting position shown in the table below. Numberring must start from "1" for every outdoor unit

Unit No. Setting

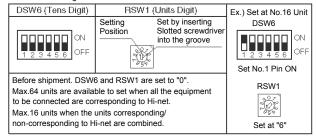

(2) Unit Mode Code Setting(DSW4)

No setting is required.
Setting the model code of the indoor unit.



(3) Capacity Code Setting(DSW3)


NO setting is required, due to setting before shipment. This switch is utilized for setting the capacity code which corresponds to the Horse Power of the indoor unit.

Capacity × 10³Btu/h				17	18	22
Setting Position				ON 1 2 3 4 OFF	ON 1 2 3 4 OFF	ON 1 2 3 4 OFF
Capacity × 10°Btu/h	24	27	30	38	48	
Setting Position	ON 1 2 3 4 OFF	ON 1 2 3 4 OF	ON 1 2 3 4 OFF	ON 1 2 3 4 OFF	ON 1 2 3 4 OFF	


(4) Refrigerant Cycle No. Setting(RSW2&DSW5) Setting is required.

Setting positions before shipment are all OFF.

Refrigerant Cycle No. Setting

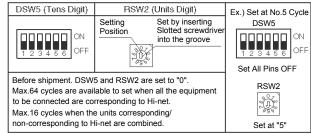

- (5) Fuse Recover (DSW7)
 - *Factroy Setting
 - *In the case of applying high voltage to the terminal 1,2 of TB2,the fuse (0.5A) on the PCB is cut.

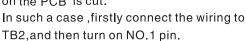



NOTE

The "■" mark indicates position of dip switches.
 Figures show setting before shipment.

ACAUTION

Before setting dip switches, firstly turn OFF power source and set the position of the dip switches. If the switches are set without turning OFF the power source, the switches can not function.



Qingdao Hisense Hitachi Air-conditioning Systems Co., Ltd.

Add: 218, Qianwangang Road, Economic & Technical Development Zone, Qingdao, P.R. China

http://www.hisense-vrf.com E-mail: export@hisensehitachi.com

P00642Q 2018.05 V07